



User's manual

4. Operating of LED lights

Pre-checks

- ✓ Ensure deep cycle batteries are charged above 12.5V by checking battery monitor on power panel.
- ✓ Ensure 12V master switch and light switch on power panel is on (The black switches on face of power panel)

All lights have independent switches that only work on specific light.

Exterior build in lights (above kitchen and on driver side above storage door or geyser outside of trailer)

Switch on blue waterproof switch

Roof lights

The switch for this lights sit next to the mattress on the bed frame support plate (Blue switch) near the foot and end of bed. These lights also have a micro switch on the light itself that can be used to change the colour of the light.

Light in storage box underneath bed.

This light must be switched on at micro switch on the light itself.

Troubleshooting:

Lights won't switch on?

- ✓ Check if master 12V ON/OFF switch on power panel is ON.
- ✓ Check if lights switch on power panel is switched on.
- ✓ Ensure the batteries are charged and that the power panel displays a voltage above 10.5V.
- ✓ Ensure wire output connections underneath power panel are secure in place. (See illustration 1)
- ✓ Check connections at light switches and lights are secure.

If all these steps are taken and light still won't work the light should be replaced.

To switch of lights all together at once the black light switch on power panel can also been used.

Hint: Switch OFF light switch at power panel when traveling.